

ALPHABETICAL INDEX

IDX

ALPHABETICAL INDEX

A

- A/C HFC134a (R134a) system
 - precaution HA-3, 128
- A/C HFC134a (R134a) system service
 - procedure HA-108, 198
- A/C HFC134a (R134a) system service
 - tools HA-12, 137
- A/C HFC134a system service equip-
 - ment precaution HA-8, 133
- A/C air flow HA-28, 148
- A/C component layout HA-21, 146
- A/C compressor clutch removal and
 - installation HA-113, 203
- A/C compressor description HA-140
- A/C compressor precaution HA-8, 133
- A/C compressor special service
 - tool HA-11, 136
- A/C control linkage adjustment
 - (manual A/C) HA-166, 170, 173
- A/C control operation (auto A/C) HA-25
- A/C control operation (manual A/C) HA-147
- A/C diagnostic work flow (auto A/C) HA-50
- A/C diagnostic work flow
 - (manual A/C) HA-158
- A/C harness layout (auto A/C) HA-31
- A/C harness layout (manual A/C) HA-150
- A/C lubricant (R134a) HA-110, 200
- A/C operational check HA-51, 159
- A/C performance chart HA-86, 191
- A/C performance test diagnoses
 - HA-82, 186
- A/C relay HA-82, 186
- A/C self-diagnoses (auto A/C) HA-40
- A/C service data specification HA-127, 217
- A/C system description (auto A/C) HA-25
- A/C trouble diagnoses (auto A/C) HA-31
- A/C trouble diagnoses (manual A/C) HA-150
- A/C, A - Wiring diagram HA-34
- A/C, M - Wiring diagram HA-154
- A/T - Wiring diagram - AT - 1ST AT-149
- A/T - Wiring diagram - AT - 2ND AT-155
- A/T - Wiring diagram - AT - 3RD AT-161
- A/T - Wiring diagram - AT - 4TH AT-168
- A/T - Wiring diagram - AT -
 - BA/FTS AT-210, 260
- A/T - Wiring diagram - AT -
 - ENG SS AT-143, 266
- A/T - Wiring diagram - AT - FTS AT-132
- A/T - Wiring diagram - AT - LPSV ... AT-180, 271
- A/T - Wiring diagram - AT - MAIN AT-121
- A/T - Wiring diagram - AT -
 - NONDTC AT-279
- A/T - Wiring diagram - AT -
 - OVRCSV AT-205, 250
- A/T - Wiring diagram - AT - PNP/SW AT-126
- A/T - Wiring diagram - AT - SSV/A .. AT-186, 240
- A/T - Wiring diagram - AT - SSV/B .. AT-191, 245
- A/T - Wiring diagram - AT - TCV AT-175, 255
- A/T - Wiring diagram - AT - TPS AT-197, 232
- A/T - Wiring diagram - AT -
 - VSS/AT AT-138, 222
- A/T - Wiring diagram - AT -
 - VSSMTR AT-217, 227
- A/T - Wiring diagram AT-16
- A/T control EC-532
- A/T diagnosis communication line .. EC-434, 556
- A/T fluid temperature sensor AT-130
- A/T self-diagnoses AT-40, 49, 56, 61
- A/T shift lock system - Wiring
 - diagram AT-339
- A/T shift lock system AT-338
- A/T trouble diagnoses AT-68, 75
- AAC/V - Wiring diagram EC-350, 521
- ABS (anti-lock brake system) BR-40
- ABS - Wiring diagram BR-45
- ABS sensor rotor AX-20
- AP/SEN - Wiring diagram EC-444
- ASCD (automatic speed control
 - device) EL-216
- ASCD - Wiring diagram EL-220
- AT/C - Wiring diagram EC-533
- ATDIAG - Wiring diagram EC-435, 557
- AUDIO - Wiring diagram EL-187
- Absolute pressure sensor EC-443
- Accelerator control system FE-3
- Air bag disposal RS-22
- Air bag precautions GI-3
- Air bag RS-10
- Air bleeding (hydraulic clutch) CL-6
- Air bleeding for brake system BR-8
- Air cleaner filter replacement MA-20
- Air conditioner cut control EC-31
- Air flow meter - See Mass air flow
 - sensor EC-139
- Air mix door control linkage
 - adjustment HA-65, 170
- Air mix. door motor HA-63, 107, 167
- Air spoiler, rear BT-32
- Alternator SC-22
- Ambient sensor HA-95
- Angular tightening application EM-3
- Antenna - See Power antenna EL-198
- Anti-lock brake system - Wiring
 - diagram BR-45
- Audio and A/C control removal and
 - installation - See Instrument panel BT-20
- Audio EL-183
- Auto air conditioner - Wiring diagram HA-34
- Automatic amplifier HA-38, 54
- Automatic speed control system - See
 - ASCD EL-216
- Automatic transmission fluid
 - replacement MA-27
- Automatic transmission number GI-41
- Auxiliary air control (AAC) valve EC-347, 519

ALPHABETICAL INDEX

B

B/COMP - Wiring diagram	EL-141
BACK/L - Wiring diagram	EL-89
Back-up lamp switch (M/T)	MT-9
Back-up lamp	EL-89
Ball joint (front)	SU-13
Basic inspection	EC-92
Battery	SC-3
Baulk ring (M/T)	MT-14
Blower motor	HA-69, 175
Blower resistor	HA-175
Board computer	EL-139
Board-on lift	GI-42
Body alignment	BT-54
Brake booster	BR-22
Brake control valve (Proportioning valve)	BR-11
Brake fluid change	BR-7
Brake fluid level and line check	BR-7
Brake fluid level	MA-29
Brake hydraulic line	BR-9
Brake inspection	MA-30
Brake lines and cables inspection	MA-29
Brake master cylinder	BR-14
Brake pedal	BR-12
Bulb specifications	EL-359
Bumper, front	BT-5
Bumper, rear	BT-8

C

CHARGE - Wiring diagram	SC-20
CHIME - Wiring diagram	EL-155
CIGAR - Wiring diagram	EL-172
CKPS - Wiring diagram	EC-302, 491
CONSULT for ABS	BR-50
CONSULT for engine	EC-71
COOL/F - Wiring diagram	EC-379
Camshaft inspection	EM-40
Camshaft position sensor (PHASE)	EC-310
Canister - See EVAP canister	EC-32
Charging system	SC-19
Chassis and body maintenance	MA-25
Cigarette lighter	EL-172
Circuit breaker	EL-17
Closed throttle position switch	EC-356, 527
Clutch cover	CL-18
Clutch disc	CL-18
Clutch fluid level	MA-25
Clutch master cylinder	CL-9
Clutch operating cylinder	CL-12
Clutch pedal	CL-6
Clutch release bearing	CL-16
Clutch release mechanism	CL-16
Clutch withdrawal lever	CL-16
Coil spring (front)	SU-9
Coil spring (rear)	SU-22
Collision diagnosis	RS-59

Combination lamp, rear, removal and installation	BT-32
Combination meter removal and installation - See Instrument panel	BT-20
Combination meter	EL-123
Combination switch	EL-36
Compression pressure	EM-11
Compressor clutch removal and installation	HA-113, 203
Compressor description	HA-140
Compressor precaution	HA-8, 133
Compressor special service tool	HA-11, 136
Connecting rod bearing clearance	EM-67
Connecting rod bushing clearance	EM-67
Connecting rod	EM-62
Console box - See Instrument panel	BT-20
Control valve (A/T)	AT-380
Converter housing installation	AT-352
Coolant mixture ratio	MA-14
Coolant replacement	MA-16
Cooling circuit (engine)	LC-10
Cooling fan control system	LC-19
Cooling fan control	EC-375
Coupling sleeve (M/T)	MT-14
Crankcase emission control system - See Positive crankcase ventilation	EC-35
Crankshaft position sensor (POS) chipping	EC-409
Crankshaft position sensor (POS) ..	EC-302, 490
Crankshaft position sensor (REF)	EC-402
Crankshaft	EM-64
Cruise control - See ASCD	EL-216
Cylinder block	EM-59
Cylinder head bolt tightening	EM-47
Cylinder head	EM-37

D

DEF - Wiring diagram	EL-175
DTC work support	EC-83
Data link connector for Consult	EC-71
Detonation sensor - See Knock sensor	EC-296
Diagnosis sensor unit	RS-15
Diagnostic trouble code (DTC) for OBD system	EC-7, 59
Diagnostic trouble code (DTC) inspection priority chart	EC-108
Differential gear (FF A/T)	AT-425
Differential gear (FF M/T)	MT-14, 28
Dimensions	GI-41
Dome light - See Interior lamp	EL-109
Door glass	BT-12
Door lock	BT-16
Door mirror	BT-52
Door trim	BT-27
Door, front	BT-11
Door, rear	BT-11
Drive plate runout	EM-68

ALPHABETICAL INDEX

Drive shaft (front) AX-9
Dropping resistor (A/T) AT-178, 269

E

ECM input/output signal EC-119
ECTS - Wiring diagram EC-153
EGR temperature sensor EC-417, 498
EGR volume control valve EC-498
EGR/TS - Wiring diagram EC-420
EGRC/V - Wiring diagram EC-328
EGRC1 - Wiring diagram EC-320, 328, 428
EMNT - Wiring diagram EC-590
EVAP canister purge volume control
 solenoid valve EC-32, 337, 509
EVAP canister EC-33
EVAP vapor lines inspection MA-24
Electric sunroof EL-202
Electrical diagnoses GI-21
Electrical ignition system EC-30
Electrical unit EL-367
Electrical units location EL-312
Engine compartment BT-55
Engine control circuit diagram EC-24
Engine control component parts
 location EC-20
Engine control module (ECM) EC-365
Engine control system diagram and
 chart EC-25
Engine coolant temperature sensor
 (ECTS) EC-151
Engine fail-safe system EC-109
Engine mounting control (Front) EC-589
Engine oil filter replacement MA-21
Engine oil precautions GI-7
Engine oil replacement MA-21
Engine outer component parts EM-8
Engine removal EM-56
Engine room - See Engine
 compartment BT-55
Engine serial number GI-40
Evaporative emission (EVAP)
 system EC-32
Exhaust gas recirculation (EGR)
 valve EC-316, 325, 426
Exhaust system inspection MA-25
Exhaust system FE-9
Exterior BT-32

F

F/FOG - Wiring diagram EL-91
F/PUMP - Wiring diagram EC-584
F02H-L - Wiring diagram EC-215, 456, 465
F02H-R - Wiring diagram EC-214, 455, 464
FR02LH - Wiring diagram EC-169, 195, 207
FR02RH - Wiring diagram EC-168, 194, 206
FUELLH - Wiring diagram EC-271, 279

FUELRH - Wiring diagram EC-270, 278
Fan control amp. HA-71
Fan switch HA-175
Final drive (FF A/T) AT-425
Final drive (FF M/T) MT-14, 28
Finisher, interior - See Trim BT-24
Finisher, trunk lid BT-31
Floor trim BT-24
Fluid temperature sensor (A/T) AT-130
Fluids MA-13
Flywheel (clutch) CL-18
Flywheel runout EM-68
Fog lamp, front, removal and
 installation BT-5
Fog lamp, front EL-90
Fork rod (M/T) MT-15
Forward clutch AT-403
Freeze frame data EC-46, 59
Front axle AX-2
Front bumper BT-5
Front combination lamp removal and
 installation BT-5
Front disc brake BR-25
Front door BT-11
Front fog lamp removal and
 installation BT-5
Front fog lamp EL-90
Front heated oxygen sensor (HO2S)
 (Left bank) .. EC-165, 175, 183, 191, 204, 454
Front heated oxygen sensor (HO2S)
 (Right bank) EC-165, 175, 183,
 191, 204, 454
Front heated oxygen sensor heater
 (Left bank) EC-212, 463
Front heated oxygen sensor heater
 (Right bank) EC-212, 463
Front seat belt RS-5
Front seat BT-38
Front suspension SU-2
Front washer EL-163
Front wiper EL-163
Fuel cut control (at no load & high
 engine speed) EC-32
Fuel gauge EL-123
Fuel injection system (Left bank) EC-268, 276
Fuel injection system (Right bank) . EC-268, 276
Fuel line inspection MA-20
Fuel precautions GI-8
Fuel pressure check EC-37
Fuel pressure regulator EC-37
Fuel pressure release EC-36
Fuel pump EC-583
Fuel system FE-4
Fuel tank vacuum relief valve EC-33
Fuse block EL-365
Fuse EL-17
Fusible link EL-17

ALPHABETICAL INDEX

G

Garage jack and safety stand	GI-43
Gauges	EL-123
Gear components (M/T)	MT-14
Generator - See Alternator	SC-22
Generic scan tool (GST)	EC-86
Glass	BT-12
Grease	MA-13
Ground distribution	EL-18

H

H/LAMP - Wiring diagram	EL-42, 49
HFC134a (R134a) system	
precaution	HA-3, 128
HFC134a (R134a) system service	
procedure	HA-108, 198
HFC134a (R134a) system service	
tools	HA-12, 137
HFC134a system service equipment	
precaution	HA-8, 133
HLC - Wiring diagram	EL-169
HORN - Wiring diagram	EL-171
HSEAT - Wiring diagram	EL-213
Harness connector	EL-5
Harness layout	EL-319
Hazard warning lamp	EL-95
Headlamp aiming control	EL-71
Headlamp removal and installation	BT-5
Headlamp washer	EL-168
Headlamp	EL-41, 47
Headlining - See Roof trim	BT-29
Heated seat	BT-40, EL-213
Height (Dimensions)	GI-41
High clutch	AT-398
Hood	BT-5
Horn	EL-171
How to erase DTC for OBD system ...	EC-57, 60

I

IACV-AAC valve	EC-347, 519
IATS - Wiring diagram	EC-148, 450
IGN/SG - Wiring diagram	EC-393, 546
ILL - Wiring diagram	EL-104
INJECT - Wiring diagram	EC-574
Identification plate	GI-40
Idle air control valve (IACV)	EC-347, 519
Ignition control system	EC-391, 545
Illumination	EL-102
In vehicle sensor	HA-98
Injector removal and installation	EC-38
Injector	EC-573
Input shaft (FF M/T)	MT-14, 19
Instrument panel	BT-20
Intake air temperature sensor	EC-146, 449

Intake door control linkage	
adjustment	HA-68, 173
Intake door motor	HA-66, 171
Intake manifold	EM-10
Intake sensor	HA-105
Interior lamp on-off control	EL-110
Interior lamp	EL-109
Interior	BT-24

J

Jacking points	GI-43
Joint connector (J/C)	EL-368
Junction box (J/B)	EL-365

K

KS - Wiring diagram	EC-298
Keyless entry system - See Multi-re-	
mote control system	EL-271
Knock sensor (KS)	EC-296
Knuckle spindle	AX-5

L

LOAD - Wiring diagram	
Length (Dimensions)	GI-41
License lamp	EL-85
Lifting points	GI-44
Line pressure solenoid valve	AT-178, 269
Line pressure test (A/T)	AT-84
Liquid gasket application	EM-3
Location of electrical units	EL-312
Lock, door	BT-16
Low and reverse brake	AT-408
Lubricant (R134a) A/C	HA-110, 200
Lubricants	MA-13
Lubrication circuit (engine)	LC-3
Lubrication-locks, hinges and hood	
latches	MA-31

M

M/T major overhaul	MT-12
M/T removal and installation	MT-10
MAFS - Wiring diagram	EC-142
MAIN - Wiring diagram	EC-132
MAJOR OVERHALL	AT-354
METER - Wiring diagram	EL-130
MIL & Data link connectors circuit	EC-608
MIL/DL - Wiring diagram	EC-608
MIRROR - Wiring diagram	EL-204
Magnet clutch	HA-77, 113, 203
Mainshaft (M/T)	MT-14, 24
Maintenance (engine)	MA-15
Malfunction indicator lamp (MIL)	EC-61

ALPHABETICAL INDEX

Manual air conditioner - Wiring diagram HA-154
 Manual transmission oil replacement MA-26
 Mass air flow sensor (MAFS) EC-139
 Master cylinder (brake) BR-14
 Master cylinder (clutch) CL-9
 Meter EL-123
 Mirror defogger EL-174
 Mirror, door BT-52
 Misfire EC-288
 Mode door control linkage adjustment HA-62, 166
 Mode door motor HA-57, 164
 Model variation GI-38
 Molding - See Exterior BT-32
 Multi-remote control system EL-271
 Multiport fuel injection (MFI) system EC-28
 Multiport fuel injection precautions GI-6

N

NATS (Nissan Anti-theft System) precautions GI-3
 NATS (Nissan Anti-theft System) EL-287
 NATS - Wiring diagram EL-290
 NVH troubleshooting (AX) AX-3
 NVH troubleshooting (BR) BR-6
 NVH troubleshooting (MT) MT-6
 NVH troubleshooting (ST) ST-5
 NVH troubleshooting (SU) SU-16
 NVH troubleshooting CL CL-4
 NVIS (Nissan vehicle immobiliser system) precautions GI-3

O

Oil change (capacity) MA-13
 Oil pan (engine) EM-12
 Oil pressure (engine) LC-4
 Oil pump (A/T) AT-376
 Oil pump (engine) LC-4
 Oil pump regulator valve (engine) LC-6
 Oil seal replacement (engine) EM-34
 On board diagnostic system EC-44
 Operating cylinder (clutch) CL-12
 Overdrive control switch AT-325
 Overrun clutch solenoid valve AT-203, 248
 Overrun clutch AT-403

P

P/ANT - Wiring diagram EL-199
 PCV (positive crankcase ventilation) EC-35
 PGC/V - Wiring diagram EC-339, 510
 PHASE - Wiring diagram EC-312
 PNP/SW - Wiring diagram EC-439, 561
 POS - Wiring diagram EC-304, 411

POWER - Wiring diagram EL-10
 PST/SW - Wiring diagram EC-594
 Park/Neutral position switch EC-437, 560
 Park/neutral position switch (A/T) AT-124
 Park/neutral position switch (M/T) MT-9
 Parking brake control BR-38
 Parking lamp EL-85
 Piston assembly EM-68
 Piston pin inspection EM-60
 Piston ring inspection EM-61
 Piston to bore clearance EM-63
 Power antenna EL-198
 Power door mirror EL-204
 Power seat EL-209
 Power steering fluid level MA-31, ST-7
 Power steering gear ST-15
 Power steering hydraulic pressure ST-9
 Power steering oil pressure switch EC-593
 Power steering oil pump ST-25
 Power steering system bleeding ST-7
 Power supply routing EL-9
 Power transistor & ignition coil EC-391, 545
 Power window EL-241
 Precautions (General) GI-4
 Pressure plate - See Clutch cover CL-18
 Pressure test (A/T) AT-84

R

R/FOG - Wiring diagram EL-93
 R02H-L - Wiring diagram EC-264
 REF - Wiring diagram EC-405
 RO2H-R - Wiring diagram EC-263
 ROOM/L - Wiring diagram EL-112
 RR02LH - Wiring diagram EC-224, 235, 246, 256, 472, 481
 RR02RH - Wiring diagram EC-223, 234, 245, 255, 471, 480
 Radiator LC-18, 20
 Radio - See Audio EL-183
 Rear air spoiler BT-32
 Rear axle (disc brake type) AX-20
 Rear axle AX-18
 Rear bumper BT-8
 Rear combination lamp removal and installation BT-32
 Rear disc brake BR-29
 Rear door BT-11
 Rear fog lamp EL-93
 Rear heated oxygen sensor (HO2S) heater EC-261, 479
 Rear heated oxygen sensor (HO2S) EC-219, 230, 241, 252, 470
 Rear seat belt RS-7
 Rear seat BT-41
 Rear suspension SU-16
 Rear window defogger EL-174
 Rear window BT-50
 Refrigerant connection precaution HA-5, 130

ALPHABETICAL INDEX

Refrigerant discharging evacuating
 charging HA-108
 Refrigerant general precaution HA-4, 129
 Refrigerant lines HA-120, 210
 Refrigeration cycle HA-15, 140
 Release bearing (clutch) CL-16
 Removal and installation (A/T) AT-351
 Reverse clutch AT-395
 Reverse idler shaft (M/T) MT-14
 Reverse lamp switch (M/T) - See
 Back-up lamp switch (M/T) MT-9
 Reverse main gear (M/T) MT-14
 Revolution sensor (A/T) AT-136, 220
 Road wheel size GI-41
 Roof trim BT-29
 Room lamp - See Interior lamp EL-109

S

S/LOCK - Wiring diagram EL-254
 S/SIG - Wiring diagram EC-580
 SAE J1930 terminology list GI-48
 SEAT - Wiring diagram EL-210
 SHIFT - Wiring diagram AT-339
 SMJ (super multiple junction) EL-363
 SROOF - Wiring diagram EL-202
 SRS - See Supplemental Restraint
 System RS-10
 START - Wiring diagram SC-13
 STOP/L - Wiring diagram EL-88
 SWL/V - Wiring diagram EC-368, 538
 Seal - See Exterior BT-32
 Seat belt inspection MA-32
 Seat belt pre-tensioner disposal RS-22
 Seat belt pre-tensioner RS-3
 Seat belt, front RS-5
 Seat belt, rear RS-7
 Seat, front BT-38
 Seat, rear BT-41
 Shift control components (M/T) MT-15
 Shift fork (M/T) MT-15
 Shift lever MT-12
 Shift lock system AT-338
 Shift schedule AT-452
 Shift solenoid valve A (A/T) AT-184, 238
 Shift solenoid valve B (A/T) AT-189, 243
 Shock absorber (front) SU-10
 Shock absorber (rear) SU-22
 Side air bag RS-21
 Side trim BT-24
 Spare tire size GI-41
 Spark plug replacement MA-22
 Speedometer EL-123
 Spiral cable RS-17
 Spring (Wheelarch) height SU-6
 Stabilizer bar (front) SU-11
 Stall test (A/T) AT-80
 Standardized relay EL-7
 Start signal EC-579

Starter SC-15
 Starting system SC-12
 Steering gear and linkage inspection MA-31
 Steering linkage ST-15
 Steering switch EL-39
 Steering wheel and column ST-10
 Steering wheel play ST-6
 Steering wheel turning force ST-8
 Stop lamp EL-88
 Striking rod (M/T) MT-15
 Strut (front) SU-9
 Strut (rear) SU-20
 Sunload sensor HA-101
 Sunroof, electric EL-202
 Sunroof BT-42
 Super lock EL-251
 Supplemental Restraint System RS-10
 Supplemental restraint system - Wiring
 diagram RS-35
 Swirl control valve control solenoid
 valve EC-368, 536
 Symbols and abbreviations GI-9
 Symptom matrix chart EC-110
 Synchronizer (M/T) MT-14
 System readiness test (SRT) code EC-47

T

TAIL/L - Wiring diagram EL-86
 TCM circuit diagram AT-16
 TCM inspection table AT-117
 TFTS - Wiring diagram EC-285, 487
 TP/SW - Wiring diagram EC-359, 528
 TPS - Wiring diagram EC-159
 TURN - Wiring diagram EL-98
 Tachometer EL-123
 Tail lamp EL-85
 Tank fuel temperature sensor EC-283, 486
 Thermostat LC-16
 Three way catalyst function (Left
 bank) EC-332
 Three way catalyst function (Right
 bank) EC-332
 Three way catalyst precautions GI-6
 Throttle bodies EM-10
 Throttle position sensor (TPS) EC-156
 Throttle position sensor adjustment EC-92
 Throttle position switch AT-194, 230, 325,
 EC-356, 527
 Throwout bearing - See Clutch release
 bearing CL-16
 Tie-rod ball joints ST-19
 Tie-rod ST-15
 Tightening torque of standard bolts GI-47
 Timing chain EM-18
 Tire rotation MA-29
 Tire size GI-41
 Torque converter clutch solenoid
 valve AT-173, 253

ALPHABETICAL INDEX

Torque converter installation AT-352, 446
 Tow truck towing GI-45
 Transaxle serial number GI-41
 Transmission case (M/T) MT-13
 Tread-FR&RR (Dimensions) GI-41
 Trim BT-24
 Trouble diagnoses GI-31
 Trunk lid finisher BT-31
 Trunk lid opener - See Trunk lid BT-8
 Trunk lid trim BT-31
 Trunk lid BT-8
 Trunk room trim BT-31
 Turn signal lamp EL-95
 Two trip detection logic EC-44
 Two-pole lift GI-44

u

Under body BT-57

v

VIAS - Wiring diagram EC-569
 VIAS EC-567
 VSS - Wiring diagram EC-345, 516
 Vacuum hose (brake system) BR-24
 Vacuum hose drawing (Engine control) EC-26
 Valve clearance EM-51
 Valve guide EM-42
 Valve seat EM-43
 Valve spring EM-44
 Variable induction air control system (VIAS) EC-567
 Vehicle speed sensor (VSS) EC-343, 515

Viscosity number (SAE) MA-14
 Viscous coupling (FF A/T) AT-425
 Viscous coupling (FF M/T) MT-9

w

WARN - Wiring diagram EL-146
 WINDOW - Wiring diagram EL-244
 WIPER - Wiring diagram EL-165
 Warning chime EL-153
 Warning lamps EL-145
 Washer, front EL-163
 Water pump LC-12
 Water temperature gauge EL-123
 Weatherstrip - See Exterior BT-32
 Wheel alignment (front) SU-6
 Wheel alignment (rear) SU-18
 Wheel balance MA-27
 Wheel bearing (front) AX-3
 Wheel bearing (rear) AX-19
 Wheel hub (front) AX-5
 Wheel hub (rear) AX-20
 Wheelarch height SU-6
 Wheelbase (Dimensions) GI-41
 Wide open & closed throttle position switch EC-156
 Width (Dimensions) GI-41
 Window, rear BT-50
 Windshield BT-50
 Wiper, front EL-163
 Wiring diagram (cell code) list EL-360
 Wiring diagrams GI-11
 Withdrawal lever (clutch) CL-16
 Wrist pin - See Piston pin inspection EM-60